


## QUICK START GUIDE

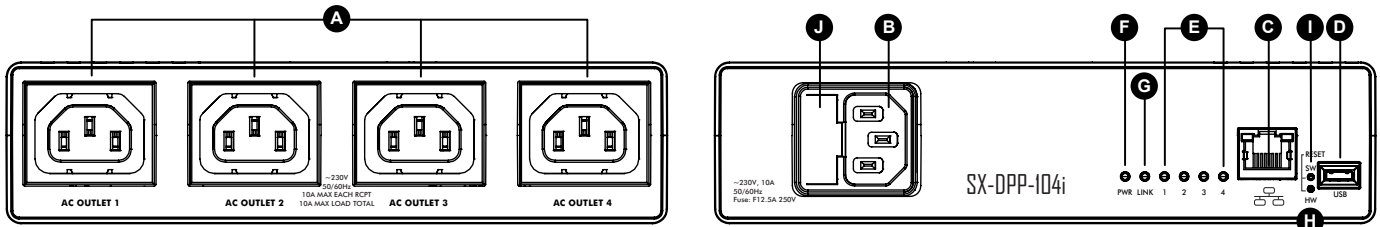

### SETTING UP THE DEVICE

- 1. Connect Powered Equipment (A):**
  - Connect appropriately rated devices to the receptacles on the rear panel.
  - Ensure the total load does not exceed the DisplayPak+'s rated maximum.
- 2. Connect Network or USB-Micro AB Cords:**
  - Use the Ethernet/RJ-45 cable or other suitable Cat 5 cabling (shielded is preferred) for Ethernet connectivity (C).
  - Wi-Fi connectivity settings are also available within the user interface.
  - The USB-Micro AB (D): connector is available for initial set up, diagnostics and troubleshooting IP connectivity issues.
- 3. Connect Power Mains (B):**
  - Plug the power cord into the appropriately rated receptacle.
- 4. Update to the Latest Firmware:**

**WARNING: Using outdated firmware may cause the device to lock up.**

  - Go to: <https://www.ametekesp.com/surgex/displaypak-plus/displaypak-plus-120v>
  - Open the Firmware section and download the latest file.
  - On the device, open the menu (≡) and select Utilities > File Upload.
  - Set File Type to Firmware Update, select the firmware file, and choose Upload. The device will automatically load the firmware.
- 5. LED Indicators:**
  - The receptacles have individual power indicator LEDs (E), paralleled in the control interface. In addition, the unit has an LED indicating power (F) and Wi-Fi Link (G).
- 6. Buttons:**
  - Hardware Reset (H): The Hardware Reset button performs a hard reboot of the processor.
  - Software Reset (I): If the Software Reset button is held for longer than 10 seconds, the unit resets itself to factory defaults, and all custom configurations are erased.
- 7. External Fuse (J) 5 x 20 mm (Cartridge Type):**
  - For SX-DPP-104 and SX-DPP-102 models, use F15A 250V AC fuses.
  - For SX-DPP-104i and SX-DPP-102i models, use F12.5A 250V AC fuses.
  - Disconnect the product from the power source before replacing the fuse.

### CONNECTING TO DEVICE INTERFACE


- 1. Locate the Factory Default IP Address (DHCP Assigned):**
  - To locate the IP address, please use the discovery tool at [ametekesp.com](http://www.ametekesp.com) or similar software.
- 2. Manually enter the static IP address <http://169.254.10.100> into a supported web browser:**
  - Ensure the PC is on the same local network.
- 3. Log into the device using factory default security credentials:**
  - Username: admin
  - Password: Adm1nXXXXXX

Where XXXXXX are the last six characters of the MAC address in ALL CAPS. The mac address is located on a label on the device.

### WALL MOUNTING


#### 1. Mounting Wall Mount Bracket

Secure wall mount brackets to the unit using 3 flat head screws

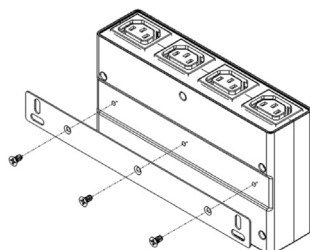

#### 2. Mounting Unit to the Wall

Secure unit to the wall using wall anchor and screw (4)

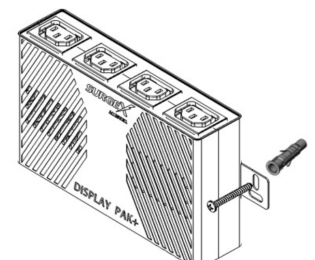

For more detailed instructions please refer to the User Manual.